



SHORTCUT SHEET

Using Powerlink3

The PowerLink control unit allows students the ability to control most electric appliances, tools and toys with single switches.

TO USE

1. Plug Powerlink into wall.
2. Plug appliance into Powerlink.
3. Plug switch into port on front of Powerlink on the same side you have the appliance plugged in to.
4. Turn on appliance—it will not go on until switch is pressed.
5. Two double outlets allows two appliances to be turned on simultaneously.

OTHER FUNCTIONS AND DIRECTIONS FOR USE

Choices of Control:

1. Direct: hand must be in contact with switch to activate.
2. Latch: turns appliance on or off each time it is pressed (like a light switch)
3. Timed seconds and minutes: will activate appliance for the specified amount of time each time the switch is pressed (1 -60 seconds or 1 – 60 minutes).

Ideas for Activities:

1. Blend food or make milk shakes.
2. Activate tape recorder, radio, or CD player—starts back at beginning for CD so you may want to have it on latch.
3. Turn on lights or Christmas lights.
4. Turn on fan.

PRODUCT INFORMATION

PowerLink3 Control Unit

AbleNet, Inc. 2808 Fairview Avenue North Roseville, MN 55113-1308 800-322-0956
U.S. & Canada 651-294-2200 outside U.S. fax 651-294-2259 (business) fax 651-294-
2222 (orders)

For more SWAAAC Shortcut Sheets, go to www.swaaac.org, click on **AT Loan Bank** and then click on **Shortcut Sheets**. Would you like a Shortcut Sheet that doesn't exist? Contact the SWAAAC office at 303-315-1278 or christina.perkins@uchsc.edu.